



## 2011 Audi TT • TTS Roadster



### Quick Reference Guide

Vorsprung durch Technik **Audi** 

This Quick Reference Guide provides you with a brief overview of selected procedures and functions in your vehicle. It does not replace the Owner's Manual with its important explanations and warnings.

## Cockpit

### 1 Release buttons for:

-  Rear lid
-  Fuel filler flap




### 2 Power windows

#### WARNING

Be careful when closing the windows. Check to see that no one is in the way, or serious personal injury could result.

### 3 Adjusting the exterior mirrors

Adjust the knob:

-  Left exterior mirror
-  Heating the exterior mirror
-  Right exterior mirror

The mirror glass moves in the direction that the knob is pressed.

### 4 Hood release

### 5 Data Link Connector for On Board Diagnostics (OBD II)

### 6 Door handle and central locking switch

-  locked
-  unlocked

### 7 Light switch


### 8 Instrument lighting

### 9 Cruise control

### 10 Multifunction steering wheel controls

### 11 Turn signal and high beam lever

### 12 Instruments and indicator lights

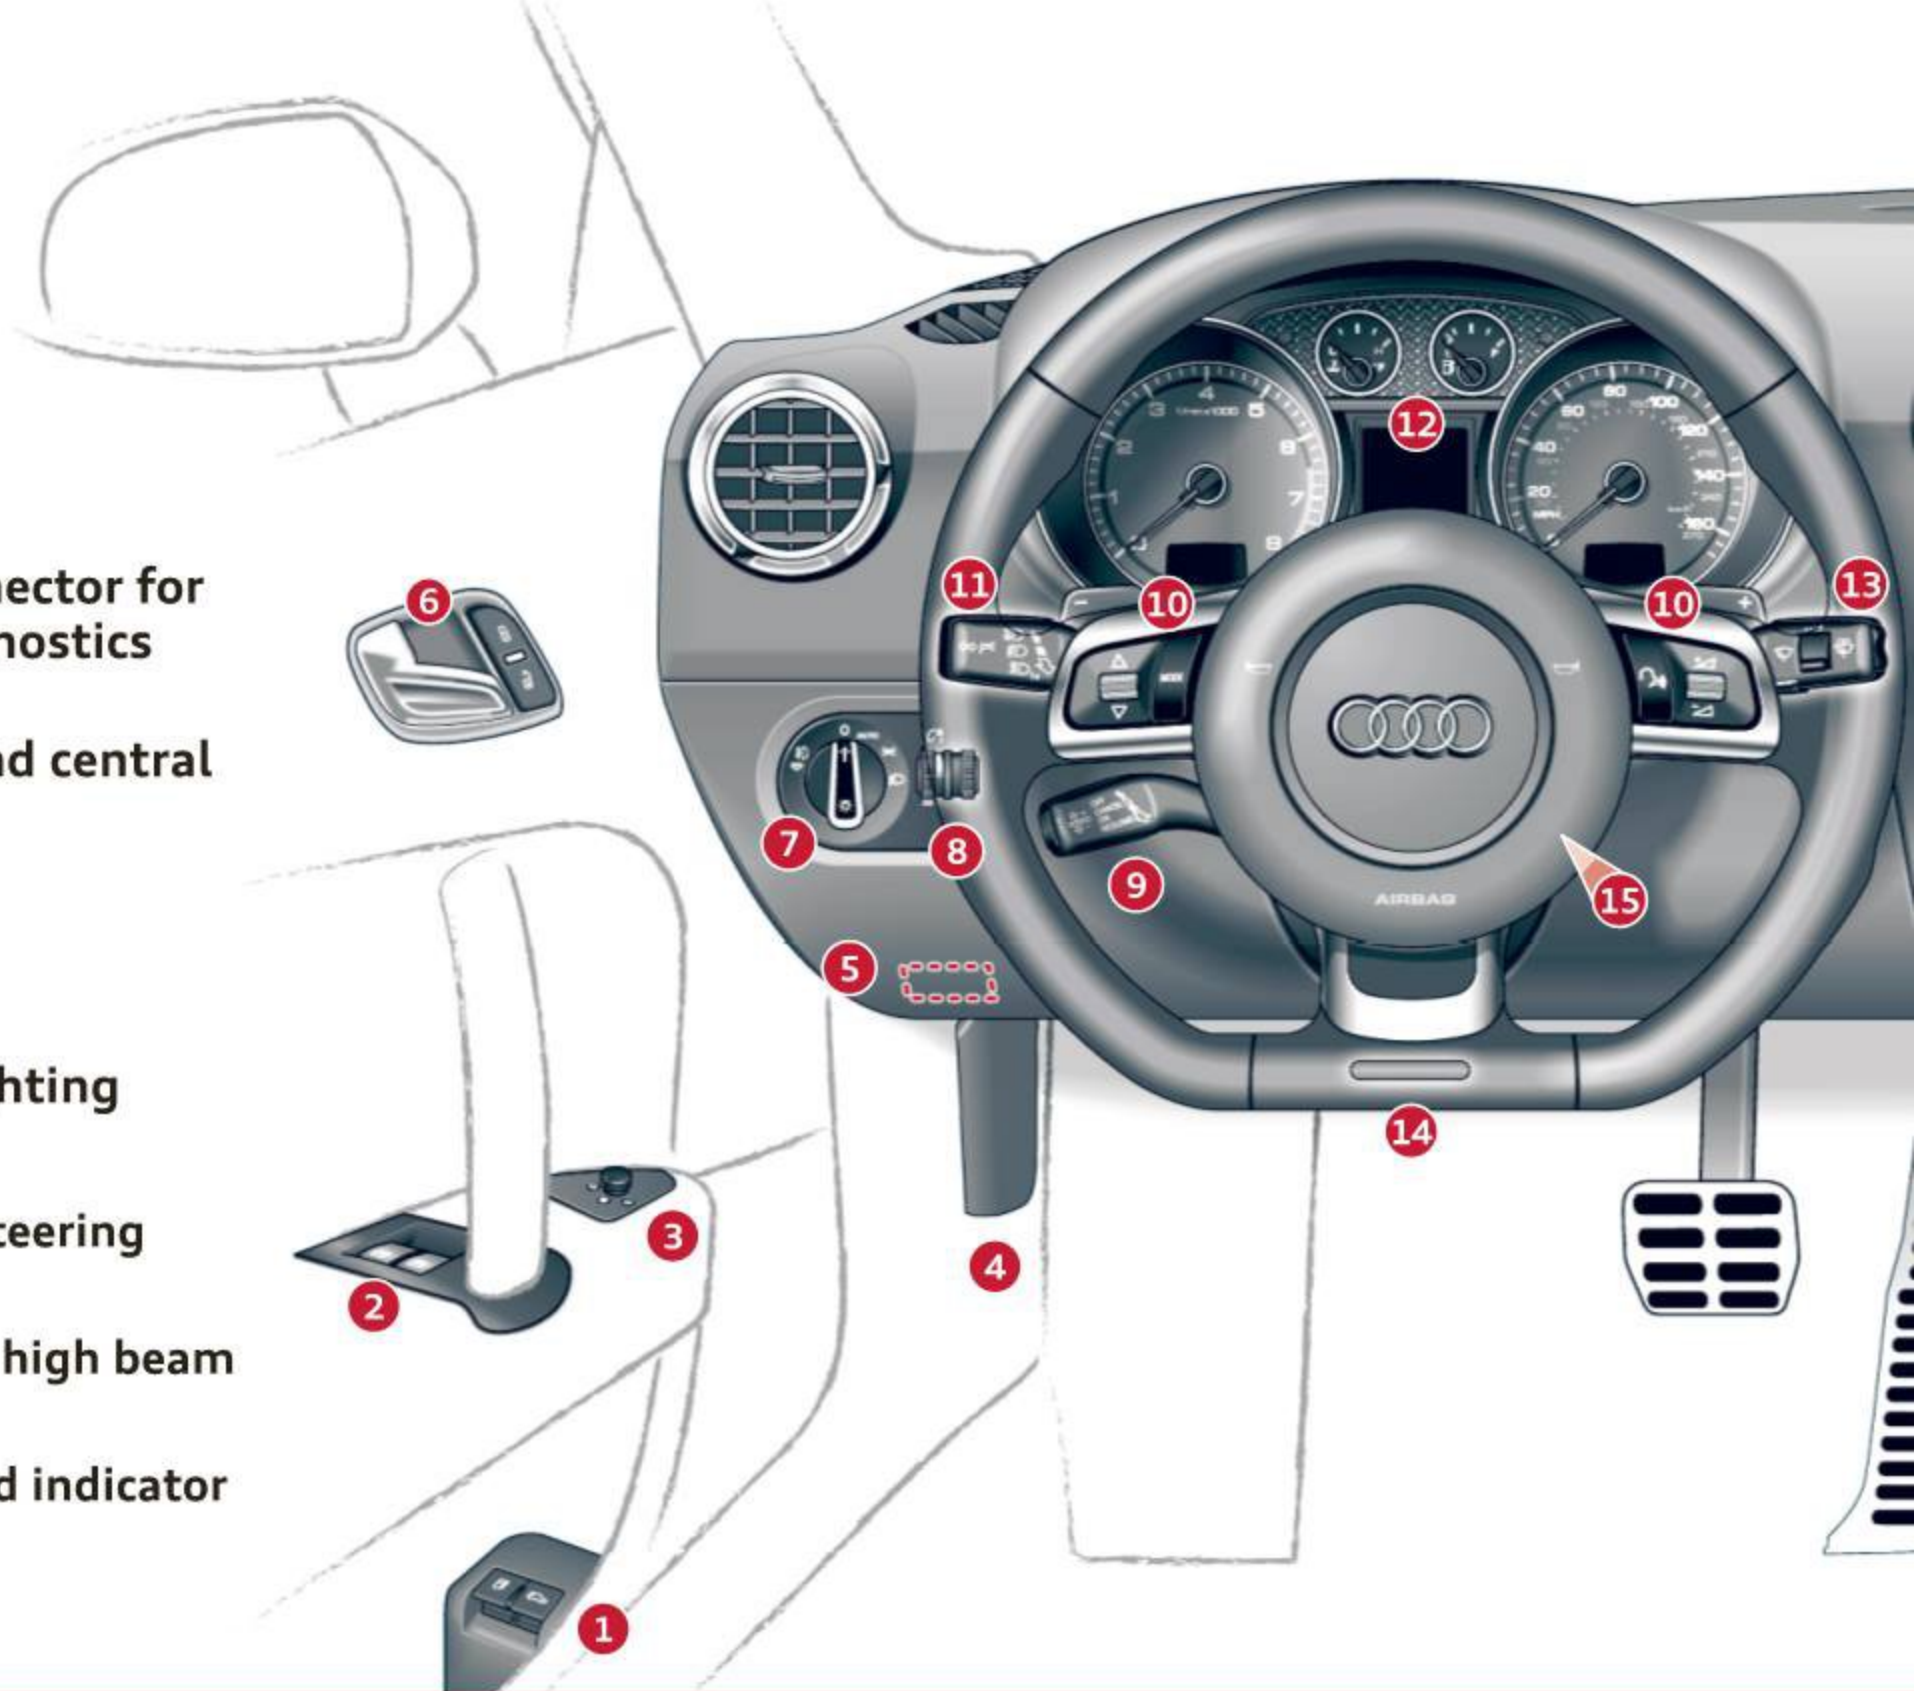



- 13 Windshield wiper controls and trip computer buttons
- 14 Steering wheel position adjuster

**⚠ WARNING**

The column should only be adjusted when the vehicle is at a complete standstill.





- 15 Ignition lock
- 16 Navigation system or radio system
- 17 Passenger airbag indicator light
- 18 Climate control system
- 19 Passenger's seat heating
- 20 Driver's seat heating
- 21 Selector lever
- 22 Ashtray with cigarette lighter
- 23  Audi magnetic ride or  Sport mode  Electronic stabilization program  Emergency flashers  Rear spoiler
- 24 Convertible top
- 25 Wind deflector
- 26 Parking brake

## Adjusting the seats

### ① Adjusting the lumbar support:

Press on the respective area of the switch.

### ② Adjusting seat height and forward/back position:

-  Front of the seat cushion up/down
-  Back of the seat cushion up/down
-  Seat up/down
-  Seat forward/back

### ③ Adjusting the backrest:

-  Backrest forward/back



## Adjusting the headrests

Hold the sides of the headrest with both hands and slide it. Adjust the head restraint so the upper edge is as even as possible with the top of your head.



### ⚠ WARNING

Thoroughly review your Owner's Manual for warnings and other important information about proper restraint use and what you can do to reduce the risk of injury in accidents. Failure to properly use restraint systems can cause serious personal injury.

### ⚠ WARNING

Never install a rearward facing child safety seat on the front passenger seat unless the PASSENGER AIR BAG OFF light comes on and stays on. A child will be seriously injured or killed when the passenger airbag inflates.

### ⚠ WARNING

Always fasten safety belts before driving off. Always make sure passengers are properly restrained. The airbag is supplemental and does not replace safety belt use.

### ⚠ WARNING

Front seat passengers must never ride in a moving vehicle with the seatback reclined. The risk of personal injury increases with increasing rearward angle of the seatback. Safety belts only offer protection when the seatback is upright and belts are properly positioned on the body. Adjust your seats only when the vehicle is at a complete standstill.

### ⚠ WARNING

The airbag system cannot protect you properly if you are seated too close to any of the airbag locations. When adjusting their seat positions, it is important that both the driver and front passenger keep their upper bodies at a minimum safe distance of 10 inches (25 cm) between the chest and the steering wheel/instrument panel.

## Starting the engine

### Switching the ignition on/starting the engine


Insert the key into the ignition lock.

**Switching the ignition on:** Turn the key to the ② position.

#### Starting the engine:

Place the selector lever in the **P** or **N** position, press the brake and turn the key to the ③ position until the engine starts.

**Stopping the engine:** Turn the key to the ① position.

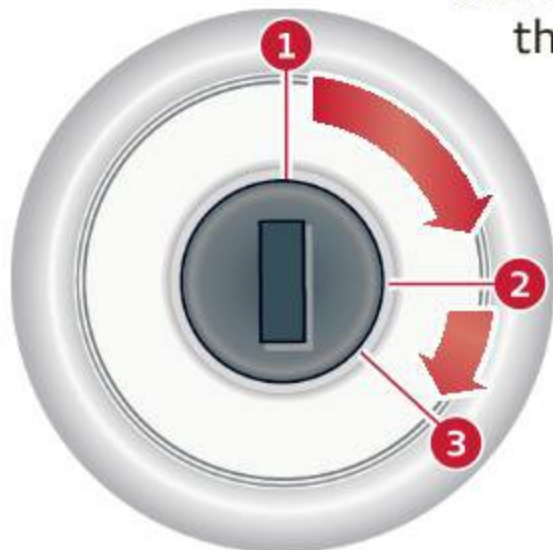

## S tronic

### Selector lever positions

- P** Park
- R** Reverse
- N** Neutral (Idle)
- D** Drive
- S** Sport

**Releasing the selector lever lock and engaging a gear:** Switch the ignition on, press the brake pedal and press the lock button on the selector lever. Place the selector lever in the **D** or **S** position to drive forward.

**tiptronic:** To shift manually, move the selector lever to the right out of the **D** position. The driver information system displays the gears.

**Shifting up/down:** Press the selector lever forward/back.








## Climate control

**Left rotary switch:** Temperature selection

**Center rotary switch:** Switch the climate control switch on/off and regulate the fan speed.

**Right rotary switch:** Air distribution

-  **Automatic mode**  
Set the desired temperature and press the button.
-  **Recirculation mode**  
Circulate and filter the air inside the passenger compartment
-  **Switch the air conditioning system on/off**
-  **Defrost the windshield/side windows**
-  **Rear window defroster**




## Audi magnetic ride

### Two suspension systems in one vehicle

**Standard driving mode:** Suspension setting that emphasizes comfort.

**Sport driving mode:** Sporty suspension setting.  
Press the  or  button to activate/deactivate.

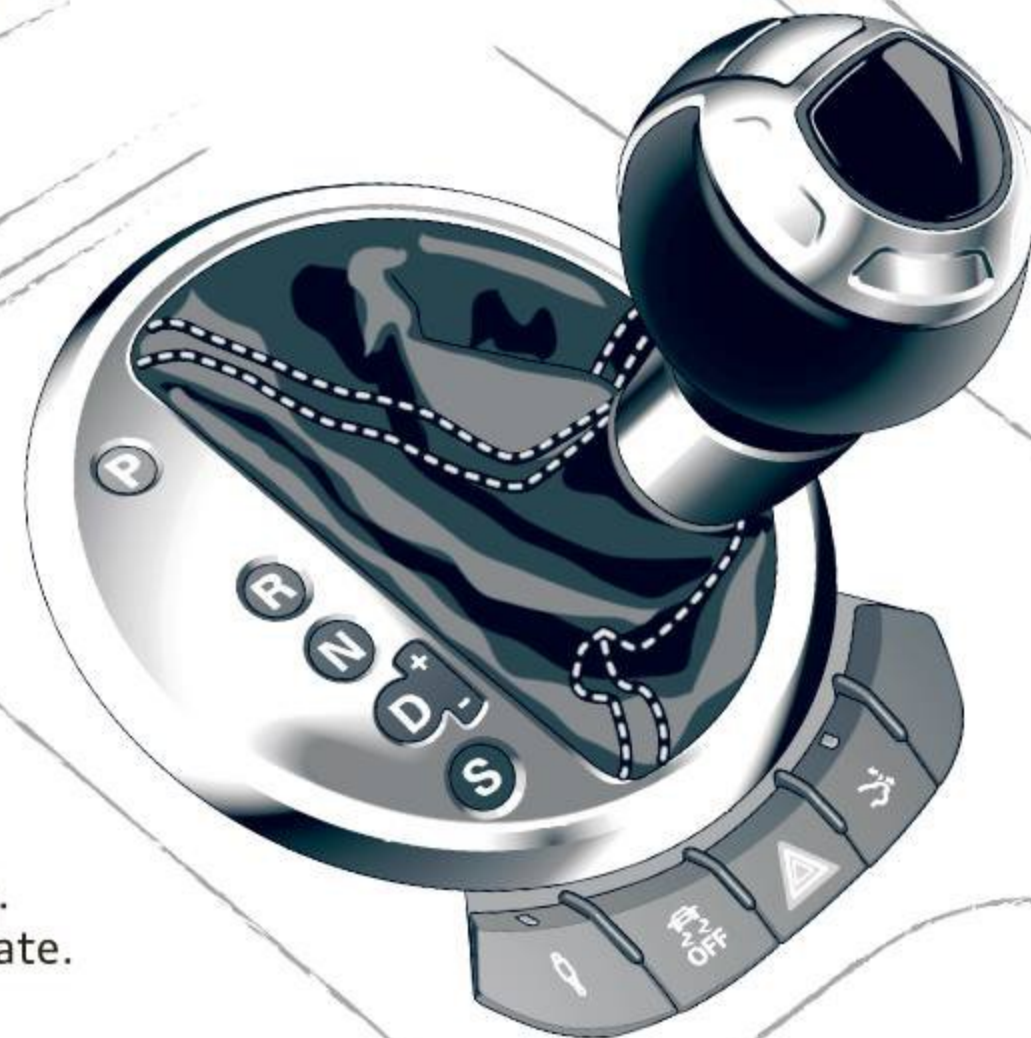


## Rear spoiler

### Increasing driving stability

The downward force at the rear axle is increased when the rear spoiler is extended.

#### Automatic mode:

The rear spoiler extends at speeds above approximately 75 mph (120 km/h) and retracts at speeds under 50 mph (80 km/h).

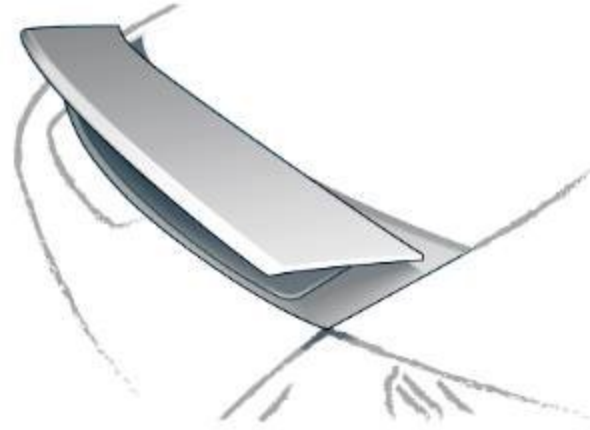


#### ⚠ WARNING

Never drive at speeds higher than 85 mph (140 km/h) if the spoiler is not deployed.

#### Manual mode:

Press the  button briefly to extend the rear spoiler.


Press the  button again at speeds between 10 mph (20 km/h) and 75 mph (120 km/h) to retract the rear spoiler.

Press and hold the  button at speeds below 10 mph (20 km/h) to retract the rear spoiler.

## Automatic convertible top

### Opening the convertible top

Switch the ignition on:

Pull and hold the  switch until the convertible top opens and the covers close completely.

### Closing the convertible top


Switch the ignition on:

Press and hold the  switch until the top has closed completely.





## Cruise control

The **CRUISE**/  indicator light appears in the instrument cluster when the system is switched on.

**Switching on/off:** Pull/press the lever **2**.

**Storing the speed:** Press the button **1**.

**Changing the stored speed:** Press the lever up (faster) or down (slower).

### WARNING


Improper use of the cruise control can cause collisions, other accidents and serious personal injury. Always read and heed the Warnings in the Owner's Manual.

## Hill Descent Assist

In vehicles with automatic transmission, Hill Descent Assist helps when driving down declines.

**Activating:** Move the selector lever to the **D** or **S** position and press the brake pedal. The current speed is maintained as long as physical and technical limits permit.

**Deactivating:** Press the accelerator pedal.

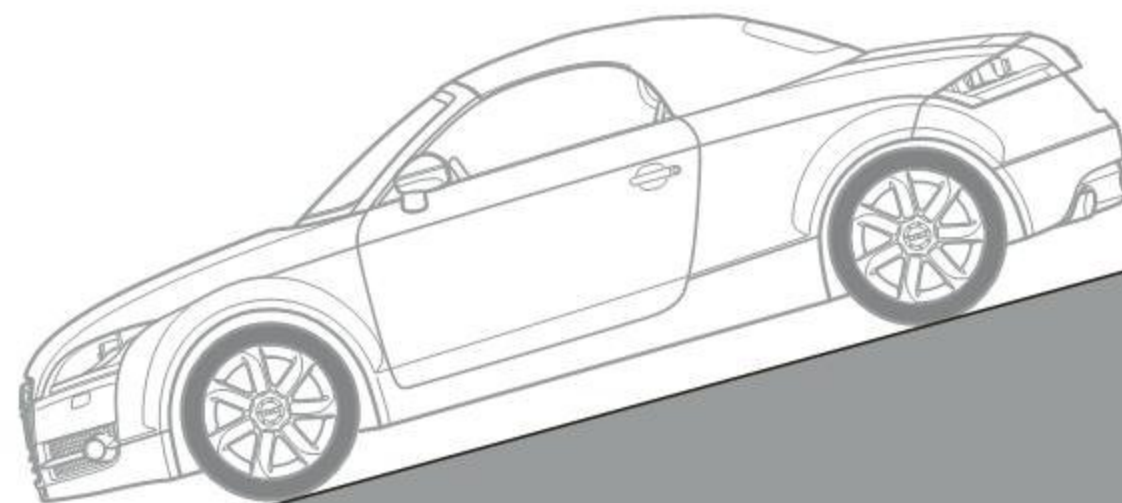


## Fuel


The label on the inside of the fuel filler flap indicates the correct fuel type.



## Fuel filler flap

**Opening:** Pull the  button in the driver's door.

**Closing:** Press the fuel filler flap in until it latches.

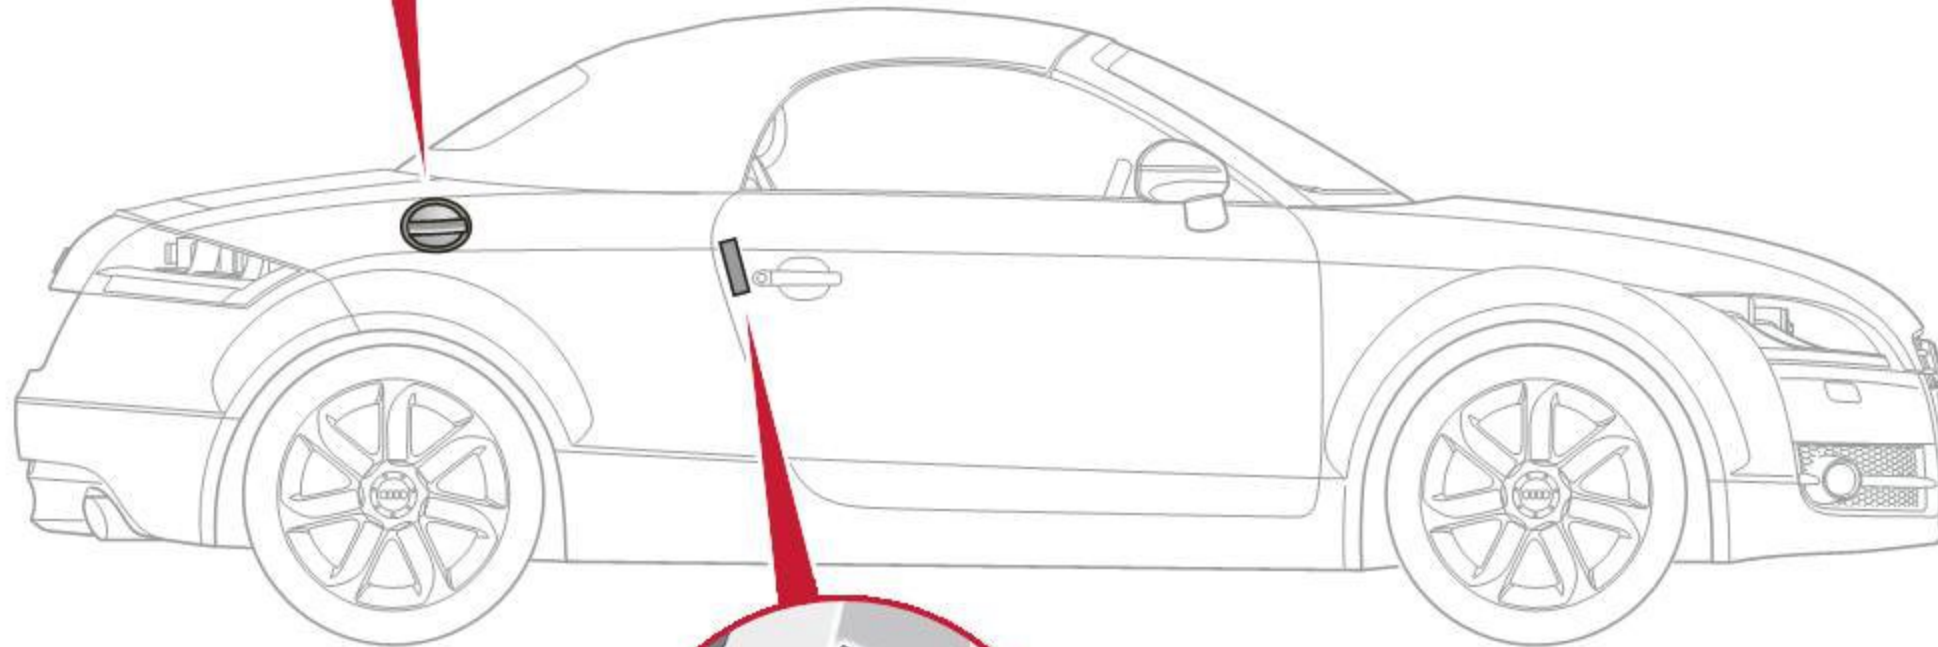

## Engine oil

For the applicable oil specifications, refer to the Owner's Manual.

## Tire pressures

The label with the correct tire pressures is located on the driver's door pillar.



## Navigation system

### Components

- ① Driver information system
- ② Multifunction steering wheel

Roll the **left menu thumbwheel** to mark a menu item in the driver information system. Press the thumbwheel to confirm the menu item.

Press the **MODE button** to switch between the active radio source, navigation system and telephone.

Roll the **right menu thumbwheel** to control the volume. Press the right thumbwheel to repeat the last navigation announcement.





### 3 Display

### 4 Function buttons

Press the desired button (such as FM<sup>®</sup>/AM) to activate that mode.

### 5 On/Off knob

**Switching on:** Press briefly.

**Adjusting the volume:** Rotate.

**Muting:** Tap.

**Switching off:** Press and hold.

### 6 Control buttons

To call up one of the functions shown in the four corners of the display, press the corresponding control button that is assigned to that corner of the display.


### 7 Control knob

**Marking a menu item in the display 3:** Rotate the control knob.

**Confirming the selection:** Press the control knob.

## Operation

Operation is the same in all functions.

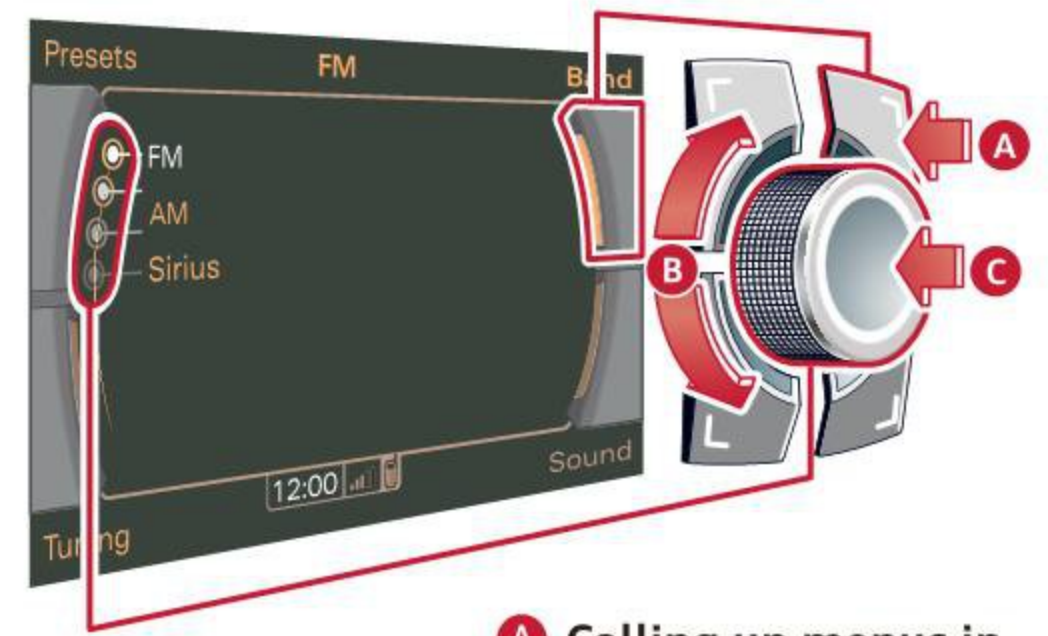

**⚠ WARNING**

**Distraction causes accidents:**

- Never enter data while driving!
- Obey traffic laws & road signs!
- Refer to the Owner's Manual!

### A Calling up menus in the display corners:

Press the corresponding button.

### B Marking:

Rotate the knob.

### C Confirming:

Press the knob.

# Storing a radio station



- 1 Press the FM/AM function button.



- 2 Rotate the control knob and mark the desired station.



- 3 Press the control knob to confirm.



- 4 Press the "Presets" control button.  
5 Rotate the control knob and mark "Store station <station name>".



- 6 Press the control knob. The next free memory preset is marked.



- 7 Rotate the control knob and mark the desired preset.  
8 Press the control knob to confirm.



- 1 Press the NAV function button.



- 2 Rotate the control knob and mark "City/Zip".
- 3 Press the control knob to confirm.



- 4 Rotate the control knob to mark the first letter of the destination.
- 5 Press the control knob to confirm.



- 6 Enter the remaining letters of the destination using the same procedure until the desired location name is displayed.



- 7 When you have entered the destination, rotate the control knob and mark "OK".
- 8 Press the control knob to confirm.



- 9 Mark the menu item "Start route guidance".
- 10 Press the control knob to confirm. The route is calculated.

## Functions

### Establishing a Bluetooth™ cell phone connection


You can connect a Bluetooth™ capable cell phone quickly to the navigation system cell phone preparation.

- Switch on the ignition, the navigation system and the cell phone.
- On the cell phone, select the menu that searches for Bluetooth™ capable devices (such as the cell phone preparation/hands-free set).
- On the cell phone, select “Audi UHV” and confirm.
- Enter the PIN “1234” on the cell phone.
- Confirm the connection in your cell phone too when requested.



### Memory cards




































#### Loading:

- Press the  button to open the display.
- Guide the memory card into the card reader slot as shown in the illustration and press on the card until it clicks into place.

#### Removing:

- Press the  button to open the display.
- Press on the memory card. The card is released and can be removed from the card reader slot.

For additional information on indicator lights, refer to your vehicle Owner's Manual.

	Audi magnetic ride		High beam		Safety belt		Check engine oil level		Defective light bulb
	Tire pressure too low (check immediately)		Rear spoiler	<b>BRAKE</b>	Parking brake (USA)		Engine oil sensor malfunction	<b>BRAKE LIGHT</b>	Defective brake light (USA)
<b>EPC</b>	Electronic power control		Turn signals/ Emergency flasher		Parking brake (CAN)		Worn brake pads		Defective brake light (CAN)
	Convertible top	<b>CRUISE</b>	Cruise control activated (USA)	<b>ABS</b>	Anti-lock brake system (USA)		Speed warning (USA)		Light/rain sensor defective
	Electronic Stabilization Program (ESP)		Cruise control activated (CAN)		Anti-lock brake system (CAN)		Speed warning (CAN)		Adaptive Light defective
	Electronic Stabilization Program (ESP)	<b>AIR BAG</b>	Safety systems (USA)		Electro-mechanical power assist		Dynamic headlight range control defective	<b>BRAKE</b>	Brake malfunction (USA)
	Malfunction Indicator Lamp (USA)		Safety systems (CAN)		Electro-mechanical power assist		Engine speed limitation		Brake malfunction (CAN)
	Malfunction Indicator Lamp (CAN)		Generator		Low fuel level		Windshield washer fluid level low		Cooling system malfunction
							Battery voltage too high or too low		Engine oil pressure too low

© 2010 AUDI AG

Audi is constantly improving their products. Modifications in form, equipment, and technology are possible. No legal commitment is implied by the information, illustrations, and descriptions in this Quick Reference Guide. Reprinting, reproduction or translation, in whole or in part, is not permitted without written permission from Audi of America, Inc. Reprinting, reproduction or translation, in whole or in part, is not permitted without written permission from Audi of America, Inc. Subject to modification without notice. Concept and design: Pfriemer GmbH.

Audi TT • TTS Roadster  
Kurzanleitung  
Nordamerika  
Englisch 11.2010  
112.562.818.21

[www.audi.com](http://www.audi.com)